

# Bodypro 330 for Android Detailed Manual

〈Rev. 1.0〉  
(Guarantee)



[www.du-sung.com](http://www.du-sung.com)

[sales@du-sung.com](mailto:sales@du-sung.com)

## 1. Product Constitution



- Quick manual
- Strap
- USB charge cable
- Heart rate transmitter(DS330)

## 2. The precautions before using

- (1) Download and install the CardioPlanner App. from the Android "Play store" or web site with [play.google.com](http://play.google.com)
- (2) Activate the Bluetooth function of your smartphone.
- (3) After opening the battery cover as figure (A), charge the chest belt as shown in Figure (B) using a USB cable (or 4.2V 20pin charger). When Using USB cable connector, the opposite port will be connected to the USB port of your computer.  
It will take approximately 2-5 hours for initial charge, and the battery charge level is displayed on the main screen of CardioPlanner.
- (4) After spraying water on sensor area of the chest belt as figure (C), please wear a chest belt on your solar plexus.
- (5) Please connect and tighten strap as figure (D) and (E) to keep the chest belt tightly on the skin of solar plexus.




(A) Charge Cover



(B) Charge method



(C) Sensor

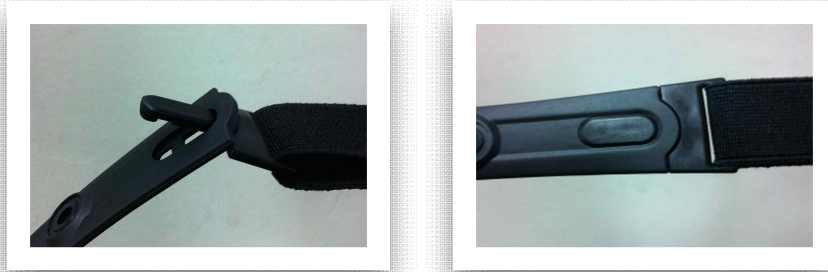

(D) How to connect the chest belt clip




(E) Wearing


### 3. The initial set of CardioPlanner App




Run the CardioPlanner of icon , and begin the initial setting by following steps.

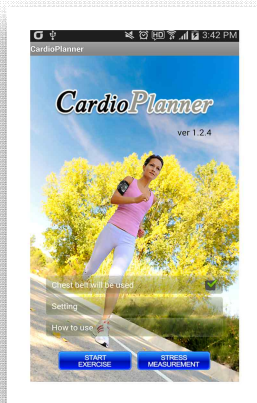


(1)

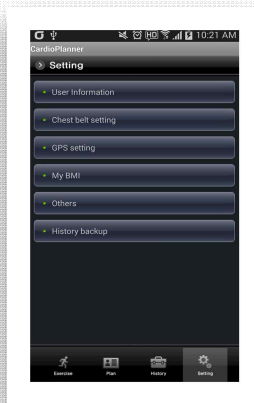


(2)

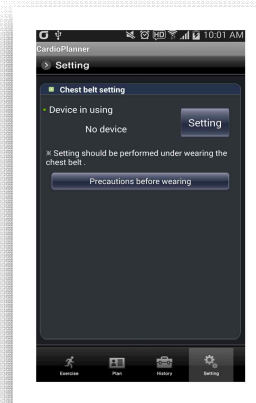


(3)

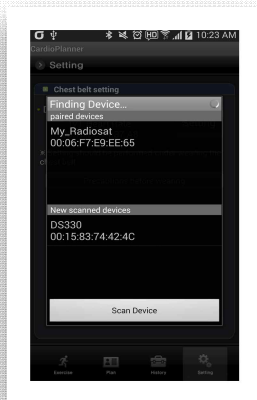

(4)

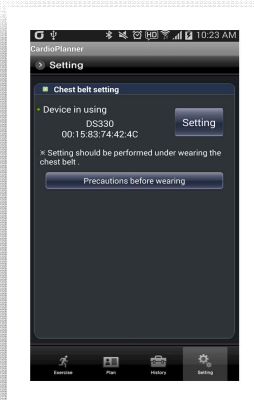


(5)

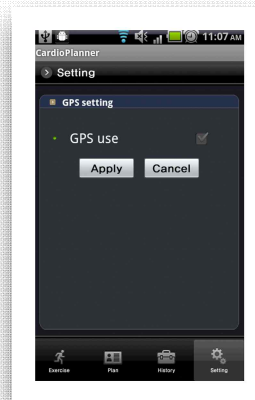


(6)

- (1) It is the CardioPlanner's initial screen.
  - Review [warning] button.
  - Click the [Chest belt will be used] button.
  - Click the [Setting] button to go to the setting's screen.
- (2) Click the [User Information] button and enter the data of user. Refer to Paragraph 4.
- (3) The [Chest belt Setting] is for Bluetooth pairing between chest belt and smartphone. It is only performed once and should be set with after wearing chest belt.
- (4) Click [Chest belt Setting] - [Setting] - [Scan Device] button in order, then select and click the ID number same with the Device ID that written on the back of the chest belt
- (5) Once the connection is completed, the Device ID in using will be displayed.
- (6) Click [Setting] - [GPS setting] to select whether using the GPS or not.


#### 4. Setting user information

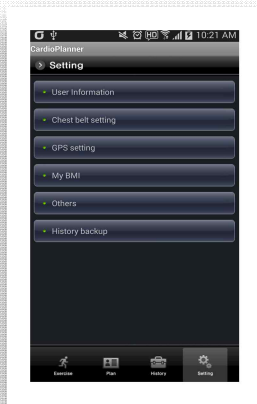


[Setting]

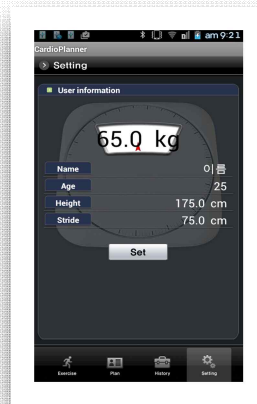


[User info]

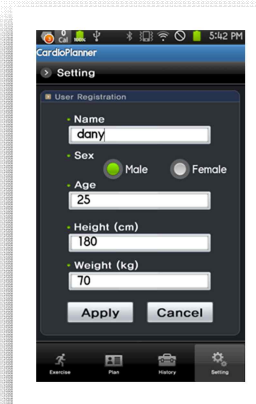

[User info Registration]

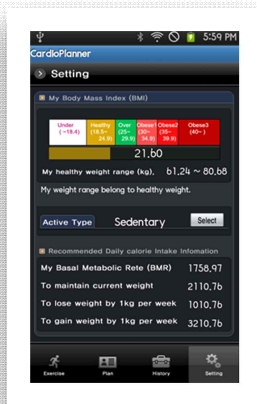

[My BMI]

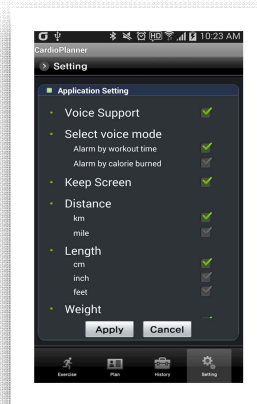

[Program setting]

Click the "Setting" tab, and you will see the [Setting] screen.


press the [Set] button and input your name, sex, age, height and weight. After filling all of the input field, Please press the [Apply] button.

The personal information will be used to calculate exercise distance, calories burned, Heart rate zone and etc., so please input the personal information carefully.

- User information: personal information of height, weight, age and etc
- My BMI: check my BMI information
- Others: please set others carefully

**\* For more information, please refer to the Help of Smartphone App.**


## 5. Start and Confirm Data during the workout

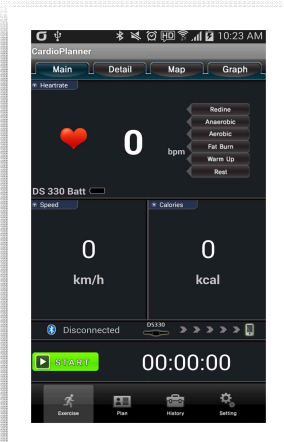


[Main - Start Button]




[Exercise mode selection]

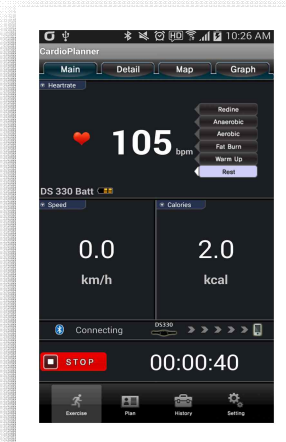


[Main - Exercise of screen]

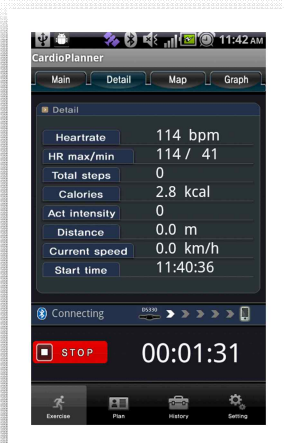

[Details info]

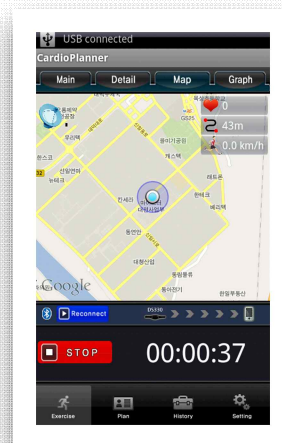

[Location info]

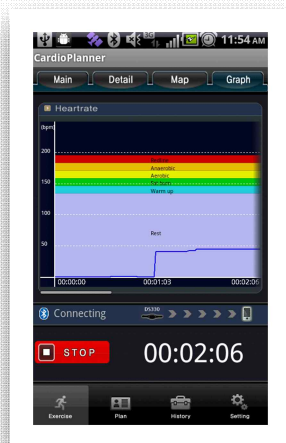

[Graph]

- (1) If you completed the initial set, press [exercise] in the CardioPlanner.
- (2) Click the button [start] on the main screen.
- (3) Select the desired movement mode at pop-up window, then the measurement starts with Bluetooth connection.
- (4) Heart rate and other measurements data can be checked as like figure [main] - [Details info] - [Location info] - [Graph] screen, Press the [Stop] button to end your workout.

### \*Precautions

- GPS will be not operated at indoor place.
- Please check the level of DS330 Batt (battery level of chest belt). If it is low level, please charge enough before exercise starting.

## 6. Review the Workout results

If you want to see the workout results, move to the [History] tab.



[History]



[summary of information]



[Heart rate details 1]




[Heart rate details 2]




[Distance traveled Details]

- You could select one item in history list..
- Click Duration [Detail] to review the detail work-out time.
- Click Avr.HR [Detail] to review detail heart rate data
- Click Steps [Detail] to review detail steps data.
- Click Distance [Detail] to review detail moving distance data.


## 7. Stress measurement methods

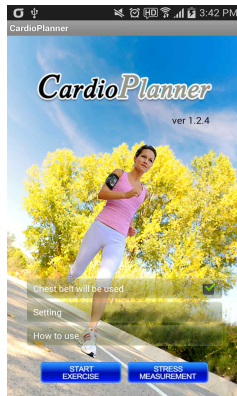


[The initial screen]

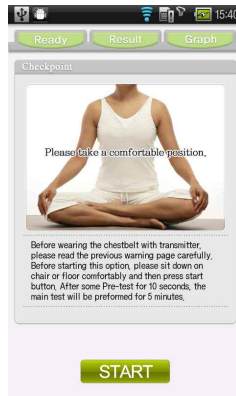


[Check point]

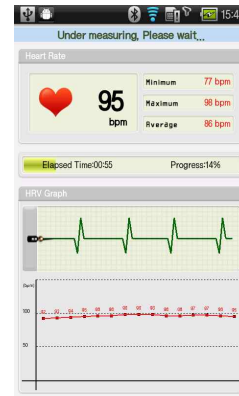

[Measurement screen]

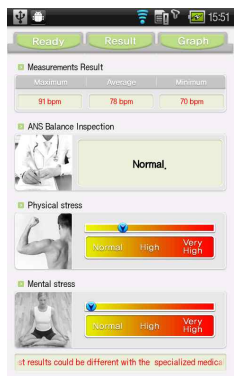

[The measured results]

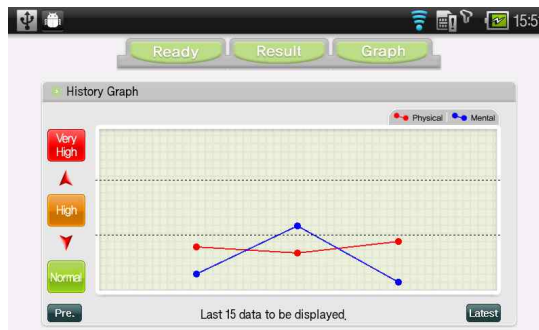

[Trend graph]

- (1) Select [Stress measurement] at the initial screen of CardioPlanner.
- (2) Please review [Checkpoint] contents before pressing the START button. After starting, Bluetooth connection will be performed and the measurement will be started.
  - ※ Before measuring, please sit down comfortably and do not shaking and speaking during measurement.
- (3) At [Measurement screen], you can check the progress and the heart rate at real time..
- (4) When the measurement will be completed, you could check the results of the stress level on [The measured results] screen.
- (5) Stress measurements results provide below information.
  - Autonomic nervous system's balance results
  - Physical / Mental stress index
  - Stress trend

## 8. Precautions

- Please be fully aware of the this manual and CardioPlanner's warning before using.
- Please make sure whether the battery is sufficiently charged.
- Please make sure whether the pairing is properly set between smartphone and chest belt
- Close the charging cover tightly to protect penetration of moisture and failure.
- Do not excessive shock, disassemble, alteration and repair.
- Please do not use under the water.
- For user of an artificial heart and heart disease, please consult doctor before using.
- Prohibit children to bite or suck.

## 9. How to store

- After the measurement is completed, it should be stored properly.
- Do not store a high temperature or humid place.
- Do not apply vibration or shock.
- Keep out of the reach of infants.
- Store condition  
Environment temperature : -10 ~ 50°C / Relative humidity range : 0 ~ 80%

## 10. Shipping terms

- A item will be arranged shipping within 4days from Korea by air-mail. upon payment cleared. A item will be shipped to buyer's Paypal registered address except buyer leave the message refer to the new address. Please confirm your order and address before you pay for the item. Otherwise, before receiving any update information, we may have shipped out your order. We don't accept dispatch the item to the third country.
- For the international buyers references, due to geographical distance, you may not receive the item in an ideal short time, we make sure that you are compensated by our great price. Also item is dispatched as quickly as possible.

## 11. Return Policy

- Buyers can request a full refund or exchange by returning the received item within 15 days of the delivery date. In order to return an item you must contact us to request a Return Merchandise Authorization Number(RMA) & attached it inside the returned parcel. Any cost of returning the item is paid in buyers end. The return must be complete with original packaging (manufacturer's box, styrofoam, plastic bags, etc) & all accessories packing slip and tags. Replacement would be offered depending on our available stock.

## 12. Guarantee

1. This guarantee does not affect the consumer's statutory rights under applicable national or state laws in force, or the consumer's rights against the dealer arising from their sales/purchase contract
2. Du-sung Technology co., Ltd guarantees the original consumer/purchaser of this device that the product will be free from defects in material or workmanship for two years from the date of purchase.
3. The guarantee does not cover normal wear and tear damage due to misuse, abuse, accidents or non-compliance with the precautions; improper maintenance, commercial use, cracked, broken or scratched cases/displays, strap.
4. The guarantee does not cover any damages, losses, costs or expenses, direct, indirect or incidental, consequential or special, arising out of, or related to the product.
5. Items purchased second hand are not covered by the two year warranty, unless otherwise stipulated by local law.
6. During the guarantee period, the product will be either repaired or replaced at any of the authorized Du-sung Technology co., Ltd regardless of the country of purchase.
7. Guarantee with respect to any product will be limited to countries where the product has been initially marketed.

Product Name		heart rate monitor system with mobile	Model	Bodypro 330
Device ID				
Customer	Name		Tel	
	Address			
Purchasing mall	Designation			
	Date of purchase			
Manufacturer	Designation	Du-sung Technology co., Ltd	Tel	82-42-936-8166
	Address	75, Sinilseo-ro, Daedeok-gu, Daejeon, Republic of Korea(306-230) www.du-sung.com sales@du-sung.com		



## Customer Service Center

☞ Opening hours

Weekdays : 10:00 ~ 18:00

Lunch hour : 12:30 ~ 13:30

Sat, Sun, Statutory holidays : Closed

☞ Contact us :

Du-sung Technology co., Ltd

75, Sinilseo-ro, Daedeok-gu,

Daejeon Republic of Korea(306-230)

Tel. 82-42-936-8166

Fax. 82-42-936-8169

Email : [sales@du-sung.com](mailto:sales@du-sung.com)

Web address : [www.du-sung.com](http://www.du-sung.com)